Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

- 1. Open the throttle fully.
- 2. Using The Start Button Press the start button for 5 seconds. Using The Kickstarter Crank the engine several times with the kick-

starter. 3 Follow the normal engine starting proceed

3. Follow the normal engine starting procedure (page 32).

Bank Angle Sensor Ignition Cut-off System

Your motorcycle's banking (lean angle) sensor system is designed to automatically stop the engine and fuel pump if the motorcycle is overturned.

How to Stop the Engine

To stop the engine, shift into neutral, and turn the ignition switch to the \bigcirc (OFF) position.