


Left Side Cover Removal

Refer to *Safety Precautions* on page 45.

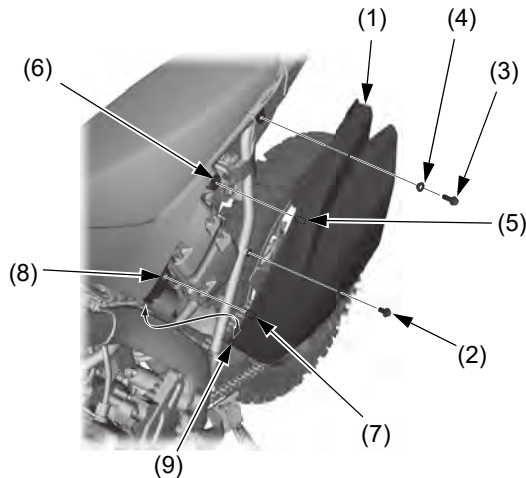

- | | |
|---------------------|-------------|
| (1) left side cover | (6) grommet |
| (2) bolt A | (7) boss |
| (3) bolt B | (8) hole |
| (4) collar | (9) tab |
| (5) prong | |

The left side cover (1) must be removed to service the air cleaner and sub fuse.

Left Side Cover Removal

1. Remove the bolt A (2), bolt B (3) and collar (4).
2. Pull out the prong (5) from the rubber grommet (6), and the boss (7) from the hole (8) on the shroud.

Left Side Cover Installation

1. Hook the tab (9) to the shroud and slide the top of the side cover under the bottom edge of the seat.
2. Align the prong with the rubber grommet, and also the boss with the hole on the shroud.
3. Install the collar onto the bolt B.
4. Install the bolt B and bolt A and tighten them securely.