


# Clutch System

4. Tighten the lock nut and check the freeplay again.
5. Return the dust cover to its normal position.

## Major Adjustment

The major clutch cable adjuster is used if the minor clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained.

RIGHT SIDE

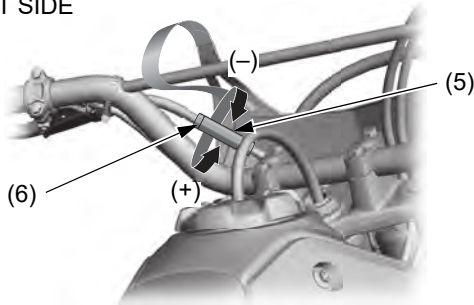

(5) major adjusting nut  
(6) major lock nut

(+) increase freeplay  
(-) decrease freeplay

1. Loosen the minor lock nut (3) and turn the minor clutch cable adjuster (4) all the way in (to provide maximum freeplay).
2. Tighten the minor lock nut and pull the rubber dust cover (2) back to its normal position.
3. Hold the major adjusting nut (5) and loosen the major lock nut (6).
4. Turn the major adjusting nut to obtain the specified freeplay.
5. Hold the major adjusting nut and tighten the major lock nut. Check the adjustment.

(cont'd)