


Battery

The battery is located in the battery compartment under the seat.

Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat (pages 56).
3. Disconnect the negative (-) terminal (1) from the battery.
4. Disconnect the positive (+) terminal (2) from the battery.
5. Release the battery holder band (3) from the hook, then remove the battery (4) taking care not to drop the terminal nuts.

UNDER SEAT

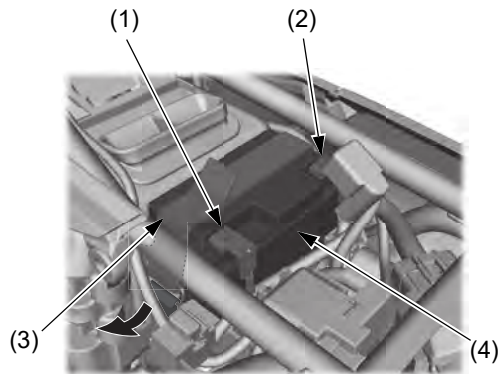

- (1) negative (-) terminal lead
- (2) positive (+) terminal lead
- (3) battery holder band
- (4) battery