

# Taking Care of the Unexpected



## *Sub Fuse Access:*

9. For access the sub fuse (7), remove the left side cover (page 57).
10. Open the fuse case cover (8) and pull the sub fuse out. If the fuse is blown (9), replace it with the spare fuse (10).
11. Close the fuse case cover and install the left side cover.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### **NOTICE**

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

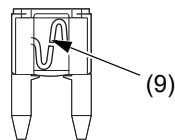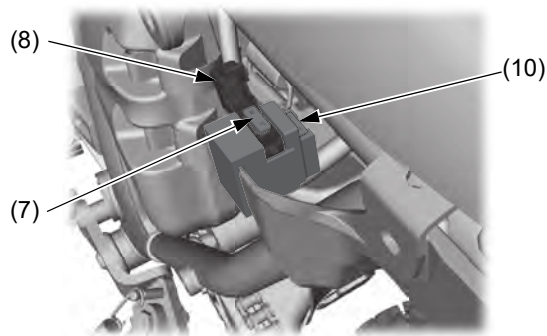

(7) sub fuse  
(8) fuse case cover

(9) blown fuse  
(10) spare fuse