


Refer to *Safety Precautions* on page 45.

Clutch Freeplay

LEFT SIDE

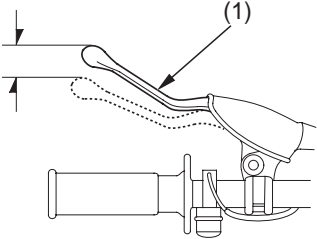

(1) clutch lever

Inspection

Check freeplay.


Freeplay: 3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range. Improper freeplay adjustment can cause premature clutch wear.

Upper Adjustment

Minor adjustments are generally made with the upper clutch cable adjuster.

LEFT SIDE

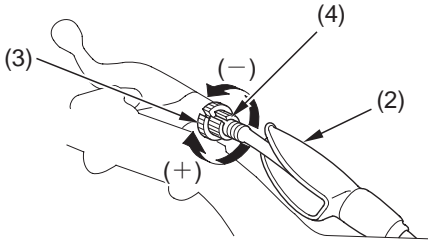

- (2) rubber dust cover
- (3) upper lock nut
- (4) upper clutch cable adjuster
- (+) increase freeplay
- (-) decrease freeplay

1. Pull the rubber dust cover (2) back.
2. Loosen the upper lock nut (3).
3. Turn the upper clutch cable adjuster (4) to obtain the specified freeplay.

(cont'd)