

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval					Refer to page:
			mi	100	600	1,200	1,800	2,400	
		km	150	1,000	2,000	3,000	4,000		
Note	Month	1	6	12	18	24			
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months					105
	Drive Chain Slider			I	I	I	I	106	
	Brake Fluid	Note 2		I	I	I	I	87	
	Brake Shoes/Pads Wear			I	I	I	I	89, 92	
	Brake System		I	I	I	I	I	86	
	Clutch System		I	I	I	I	I	75	
	Side Stand				I		I	104	
*	Suspension				I		I	83	
*	Spark Arrester		C: every 1,000 mi (1,600 km) or every 100 operating hours					81	
*	Nuts, Bolts, Fasteners		I		I		I	—	
**	Wheels/Tires		I	I	I	I	I	94, 100	
**	Steering Head Bearings		I		I		I	—	

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 162](#)).

** In the interest of safety, we recommend these items be serviced only by your dealer.