


# Wheels

## Front Wheel Removal

RIGHT FRONT

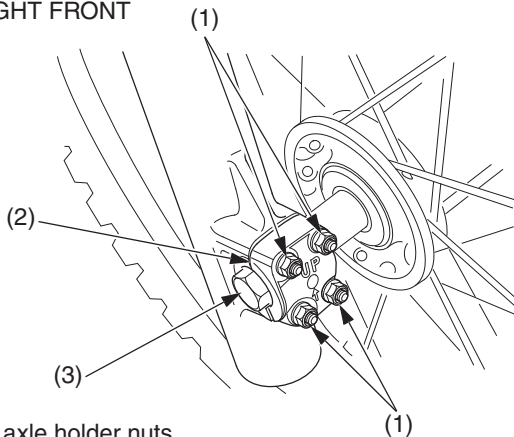

- (1) axle holder nuts
- (2) axle holder
- (3) front axle shaft

## Removal

1. Raise the front wheel off the ground by placing a maintenance stand or support block under the engine. Secure the rear of the motorcycle with tie-down straps.
2. Remove the axle holder nuts (1) and the axle holder (2).
3. Unscrew and remove the front axle shaft (3). Remove the wheel and side collars.  
Avoid depressing the brake lever when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your dealer for this service.