

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.

Operation Component Locations .....6