

Servicing Your Honda

Service Preparations

Maintenance Component Locations	49
Tools	52
Side Cover Removal	53

Service Procedures

Fluids & Filters

Fuel	54
Engine Oil	57
Air Cleaner	64
Crankcase Breather	68

Engine

Throttle	69
Clutch System	72
Spark Plug	75
Spark Arrester	77

Chassis

Suspension	79
Brakes	82
Wheels	87
Tires & Tubes	93
Side Stand	97
Drive Chain	98

Electrical

Battery	105
---------------	-----

Appearance Care	110
-----------------------	-----