


# Engine Oil

RIGHT SIDE

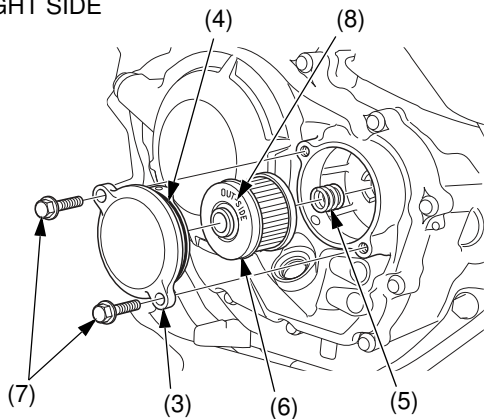

- |                      |                            |
|----------------------|----------------------------|
| (3) oil filter cover | (6) oil filter             |
| (4) O-ring           | (7) oil filter cover bolts |
| (5) spring           | (8) "OUT-SIDE" mark        |

5. Remove the oil filter cover (3)/O-ring (4), spring (5) and oil filter (6) by removing the oil filter cover bolts (7).

6. Pour the drained oil into suitable container and dispose of it in an approved manner (page 123).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

7. Install the spring, and then install a new oil filter with the "OUT-SIDE" mark (8) facing out. Use only the Honda Genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.

## NOTICE

*Improper installation of the oil filter can cause serious engine damage.*