


Refer to *Safety Precautions* on page 39.

Throttle Freeplay

RIGHT SIDE

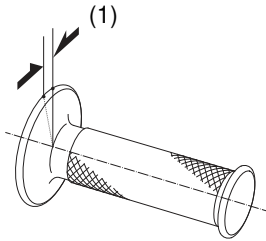

(1) freeplay

Inspection

Check freeplay (1).


Freeplay: 1/16 – 1/4 in (2 – 6 mm)

If necessary, adjust to the specified range.

Upper Adjustment

Minor adjustments are generally made with the upper adjuster.

RIGHT SIDE

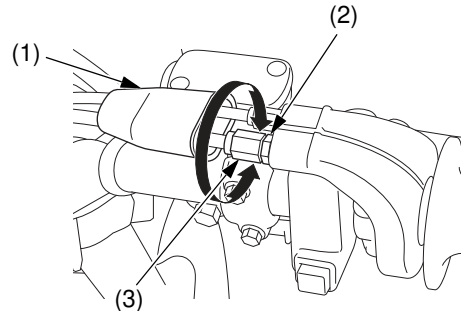

(1) rubber dust cover

(3) upper adjuster

(2) upper lock nut

1. Pull the rubber dust cover (1) back.

2. Loosen the upper lock nut (2) on the throttle cable mechanism.

3. Turn the upper adjuster (3).

(cont'd)