

**Clock (12-hour display)
To set the clock: P.30**

**Odometer [TOTAL] & Tripmeter
[TRIP A/B] & Stopwatch P.22**

Gear position indicator

The gear position is shown in the gear position indicator.

▲ “-” appears when the transmission is not shifted properly.

**Average fuel mileage [AVG] , Fuel consumption, and
Average speed [AVG] P.26**

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 2.2 L (0.58 US gal, 0.48 Imp gal)

If the fuel gauge indicator flashes in a repeat pattern or turns off:

P.95

