

Instrument (Continued)

- To reset the tripmeter [TRIP A/B], average fuel mileage [AVG], fuel consumption [AVG], and average speed [AVG]

To reset the tripmeter A, average fuel mileage A, average fuel consumption A and average speed A (these are based on tripmeter A) together, press and hold the **SEL** button while tripmeter A is displayed.



To reset the tripmeter B, average fuel mileage B, average fuel consumption B and average speed B (these are based on tripmeter B) together, press and hold the **SEL** button while tripmeter B is displayed.

