

Stopwatch

To Measure the Time

1. Select the stopwatch. **▶P.22**
2. To start measurement, press the **SET** button.
 - ▶ The measurement keeps going, if you change an item while measuring.
3. To finish measurement, press the **SET** button.
 - ▶ The measurement can also be finished by turning the ignition switch to the **○ (Off)** position.

To Restart the Measurement

Press the **SET** button again. The stopwatch restarts measurement.

To Reset the Measured value

Press and hold the **SEL** button when the stopwatch is displayed and also the measurement is finished.

