

## Instruments (Continued)

### Setting Mode A

If the **SET** button is not pressed for about 30 seconds, the control is automatically switched from the setting mode to the ordinary display.

If the **SET** button is not pressed for about 30 seconds, items in the process of being set will be discarded and only items where settings have been finalised will be applied. Only if the ignition switch is turned to the **O** (Off) position will items in the process of being set and those that are finalised be applied.

### 1 Clock setting:

- 1 Turn the ignition switch to the **I** (On) position.
- 2 Press and hold the **SEL** and the **SET** buttons until the hour digits start flashing.



- 3 Press the **SEL** button until the desired hour is displayed.

► Press and hold the **SEL** button to advance the hour fast.



- 4 Press the **SET** button. The minute digits start flashing.

