

Instruments *(Continued)*

3 Changing the fuel mileage meter unit:

- 1** Press **SEL** button to select "L/100km" or "km/L".
- 2** Press **SET** button. The fuel mileage meter unit is set, and then the display moves to the ordinary display.