

Setting Mode B

If the **SET** button is not pressed for about 30 seconds, the control is automatically switched from the setting mode to the ordinary display.

If the **SET** button is not pressed for about 30 seconds, items in the process of being set will be discarded and only items where settings have been finalised will be applied. Only if the ignition switch is turned to the **○** (Off) position will items in the process of being set and those that are finalised be applied.

1 Setting of REV indicator:

You can change the setting of the REV indicator. REV indicator is blinking while setting.

