

2 Changing of tachometer display

mode:

You can change the display mode of the tachometer.

- 1 Press **SEL** button to switch the display mode of tachometer.
- 2 Press **SET** button. The currently selected displaying mode is set, and the control returns to the ordinary display.

Conventional display


Shows the engine RPM on the tachometer bar segment.

Peak hold display


Shows the engine RPM on the tachometer bar segment and peak hold segment. The peak hold segment keeps to show the maximum engine RPM temporarily.

Ex Engine revolutions per minutes
10,500 r/min (rpm)

Conventional Tachometer bar display

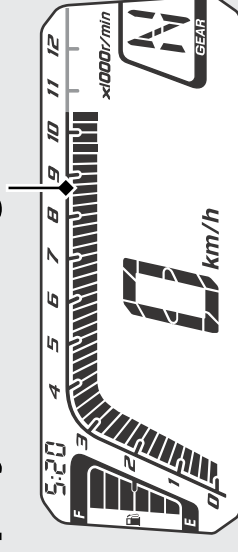

Peak hold display

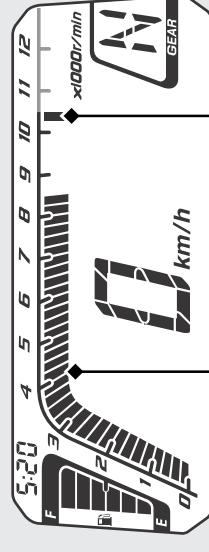

Tachometer bar Peak hold segment