


### Ignition Switch

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the **O (Off)** or **🔒 (Lock)** position.

**Steering Lock:**  **P.44**

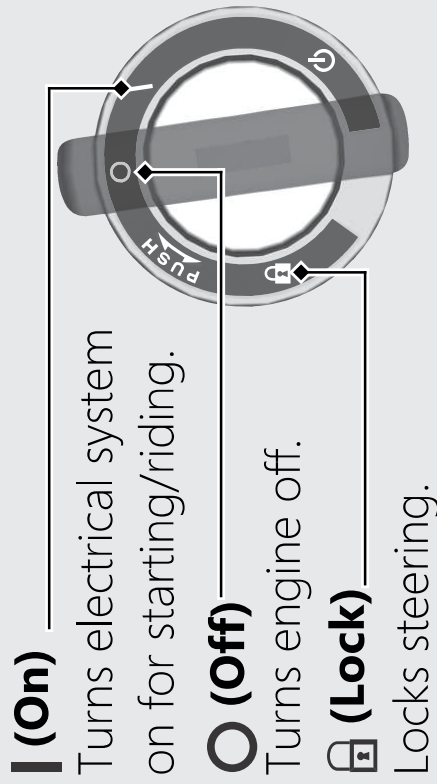

### Engine stop switch

Should normally remain in the **⊞ (Run)** position.

- ▶ In an emergency, switch to the **⊗ (Stop)** position (the starter motor will not operate) to stop the engine.

### Start button

### Hazard switch

Switchable when the ignition switch to the **I (On)** position.