 











Items	Pre-ride Check  P. 59	Frequency*1												Annual Check	Regular Replace	Refer to page	
		x 1,000 km	1	6	12	18	24	30	36								
		x 1,000 mi	0.6	4	8	12	16	20	24								
Fuel Line 					<b>I</b>		<b>I</b>		<b>I</b>		<b>I</b>		<b>I</b>				-
Fuel Level	<b>I</b>																51
Throttle Operation 	<b>I</b>				<b>I</b>		<b>I</b>		<b>I</b>		<b>I</b>		<b>I</b>				89
Air Cleaner*2 								<b>R</b>					<b>R</b>				-
Crankcase Breather*3			<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>	<b>C</b>			-
Spark Plug 																	-
Valve Clearance 																	-
Engine Oil	<b>I</b>																-
Engine Oil Filter		<b>R</b>															-
Engine Idle Speed 		<b>R</b>															-
Radiator Coolant*5	<b>I</b>																77
Cooling System 																	-
Secondary Air Supply System 																	-
Evaporative Emission Control System 																	-

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

### Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)

**L** : Lubricate

**R** : Replace

**C** : Clean