

The tool kit is stored in the tool box. ➔ P. 53

You can perform some roadside repairs, minor adjustments and parts replacement with the provided tools.

IN type

- 5 mm Hex wrench
- 6 mm Hex wrench
- Fuse puller

MA, PH type

- Standard/Phillips screwdriver
- Screwdriver handle
- 12 x 14 mm Open end wrench
- 5 mm Hex wrench
- 6 mm Hex wrench
- Fuse puller