

## Checking the Coolant

Check the coolant level in the reserve tank while the engine is cold.

- 1.** Place your vehicle on a firm, level surface.
- 2.** Hold your vehicle in an upright position.
- 3.** Check that the coolant level is between the UPPER level and LOWER level marks on the reserve tank.

If the coolant level is dropping noticeably or the reserve tank is empty, you likely have a serious leak. Have your vehicle inspected by your dealer.

