

- 4 Press A button. The speed and mileage units is set, and then the display moves to the clock setting.

## 2 To set the clock:


### 1 (Except E type)

Turn the ignition switch on.  
Press and hold A button and B button until the hour digits start flashing.


#### (E type only)

After speed and mileage units adjustment, the hour digits start flashing.


- 2 Press B button until the desired hour is displayed.  
▶ Press and hold to advance the hour fast.

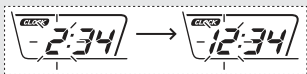

- 3 Press A button. The minute digits start flashing.

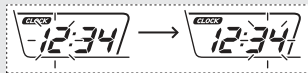

- 4 Press B button until the desired minute is displayed.  
▶ Press and hold to advance the minute fast.

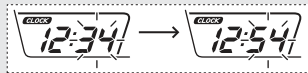

### 5 (Except E type)

Press A button. The clock is set, and then the hour digits start flashing again.

#### (E type only)

Press A button. The clock is set, and then the display returns to the speed and mileage units adjustment.