


Seat

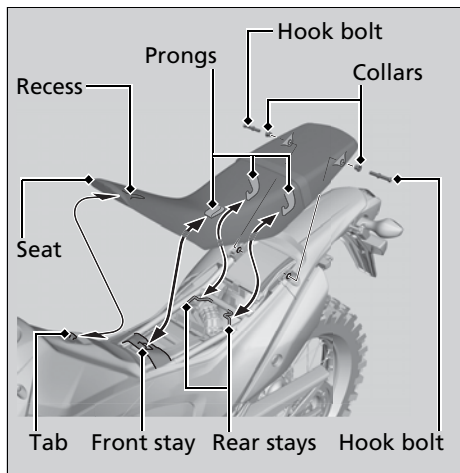

The seat must be removed to access the owner's manual.

Removal

1. Remove the collars and hook bolts.
2. Pull the seat back and up.

Installation

1. Align the recess with the tab and insert the prongs into the front stay and rear stay.
2. Install the collars onto the hook bolts. Tighten the hook bolts.

Torque: 21 N·m (2.1 kgf·m, 15 lbf·ft).