


Left Side Cover

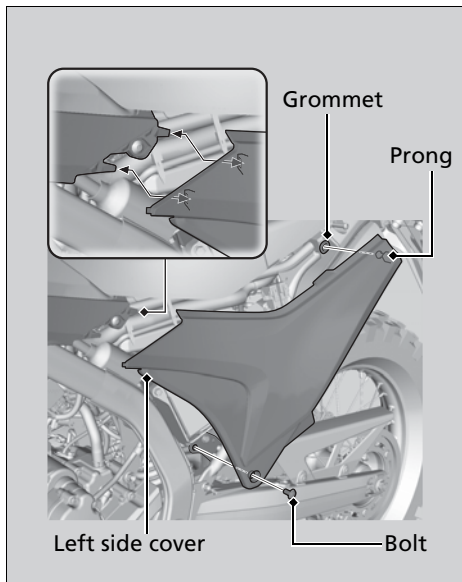

The left side cover must be removed to access the battery, main fuse and fuse box.

Removal

1. Remove the bolt.
2. Remove the prong from the grommet.
3. Remove the left side cover.

Installation

Install the parts in the reverse order of removal.