

Checking the Drive Chain Slider

Check the condition of the drive chain slider. The drive chain slider need to be replaced if it is worn to the wear limit indicator or wear limit line.

To inspect the wear limit line, remove the drive sprocket cover by removing the bolts. If necessary have the drive chain slider replaced by your dealer.

U type only To inspect the wear limit indicator, remove the drive chain cover by removing the bolts.

