

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 44

### Fuse Box Fuses

1. Remove the left side cover. ► P. 54
2. Open the fuse box.
3. Pull the fuses out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box.
5. Install the left side cover.

