


Clutch System

Refer to *Safety Precautions* on page 23.

Clutch Lever Adjustment

The distance between the tip of the clutch lever and grip may be adjusted.

Make sure to adjust the clutch lever freeplay after the clutch lever position adjustment or clutch cable disconnected.

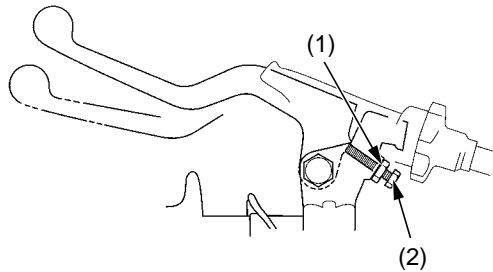


(1) lock nut

(2) adjuster


1. Loosen the lock nut (1).
2. To position the clutch lever farther away from the handgrip, turn the adjuster (2) counterclockwise. To position the brake lever closer to the handgrip, turn the adjuster clockwise.
3. Tighten the lock nut.

4. Turn the cable end adjuster (3) in direction (+) until it seats lightly and then turn it out 5 turns.

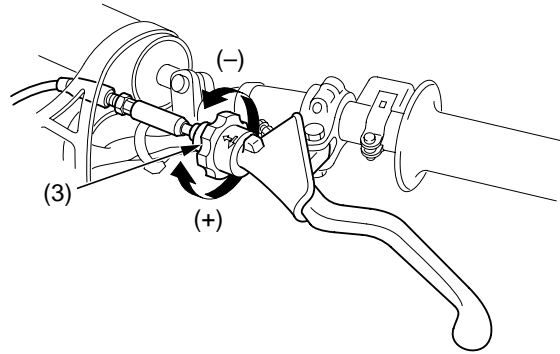

- (3) cable end adjuster
(+) increase freeplay
(-) decrease freeplay


5. Loosen the lock nut (4) and turn the integral cable adjuster (5) to adjust the clutch lever freeplay $3/8 - 13/16$ in (10 - 20 mm) at the tip of lever. Tighten the lock nut.

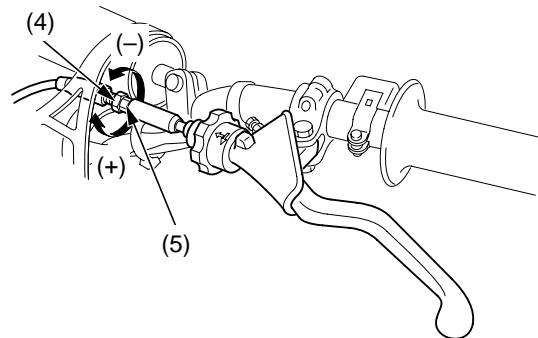

- (4) lock nut
(5) integral cable adjuster
(+) increase freeplay
(-) decrease freeplay

6. Adjust the cable end adjuster for minor adjustment.

Clutch Lever Freeplay

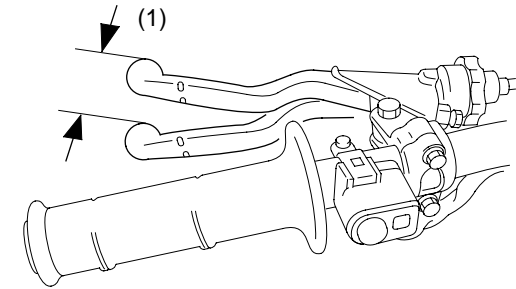

(1) freeplay

Inspection

Check freeplay (1).

Freeplay: $3/8 - 13/16$ in (10 - 20 mm)

If necessary, adjust to the specified range. Improper freeplay adjustment can cause premature clutch wear.

Make sure to adjust the clutch lever freeplay after the clutch cable is disconnected.