


Piston/Piston Rings/Piston Pin

18. Remove the dowel pins (17), cylinder head gasket (18) and cam chain guide (19).

NOTICE

Do not let the dowel pins and cam chain fall into the crankcase.

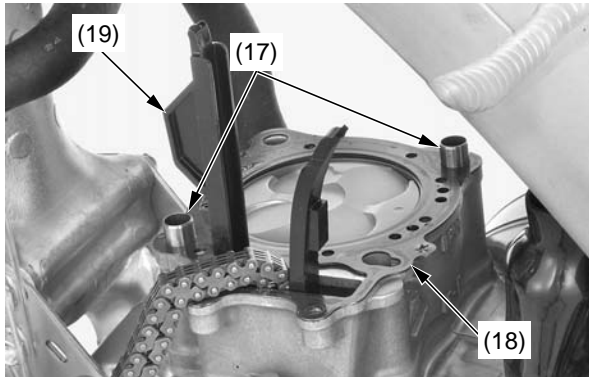

- (17) dowel pins
(18) cylinder head gasket
(19) cam chain guide