

ADJUSTMENTS FOR COMPETITION ...	119	TIPS	153	INDEX	176
Engine Mode Select Button	120	Transporting Your Motorcycle	154	QUICK REFERENCE	
Current Mode	120	Storing Your Honda	155		
Mode Selection.....	120	Preparation for Storage	155		
Front Suspension Adjustments	121	Removal from Storage	155		
Front Suspension Air Pressure	121	You & the Environment	156		
Front Suspension Damping (Right Fork) ...	122	Troubleshooting	157		
Fork Springs (Left Fork)	122				
Fork Removal	125	TECHNICAL INFORMATION.....	159		
Right Fork Disassembly	127	Vehicle Identification	160		
Damper Oil Change.....	129	Serial Numbers.....	160		
Right Fork Assembly	131	Specifications	161		
Fork Installation	133	Torque Specifications	162		
Rear Suspension Adjustments	137	Nuts, Bolts, Fasteners	162		
Rear Suspension Spring Pre-Load.....	137	Oxygenated Fuels	165		
Rear Suspension Damping	138	Competition Logbook	166		
Rear Suspension Race Sag.....	139	Optional Parts List	168		
Suspension Adjustments for Track		Spare Parts & Equipment	169		
Conditions	141	Spare Parts	169		
Suspension Adjustment Guidelines	142	General Tools.....	169		
Tuning Tips	145	Honda Special Tools.....	169		
Spark Plug Reading.....	145	Chemical Products	169		
Steering Damper Adjustment	146	Other Products	169		
Steering Damper Damping.....	146	Wiring Diagram	170		
Steering Damper Adjustment Guidelines	147				
Chassis Adjustments	148	CONSUMER INFORMATION.....	171		
Rear End.....	148	Authorized Manuals	172		
Fork Height/Angle.....	148	Contacting Honda	173		
Wheelbase	148	Your Honda Dealer	174		
Gearing	149	The Honda Rider's Club (USA only)	175		
Tire Selection for Track Conditions	150				
Personal Fit Adjustments	151				
Control Positioning	151				
Handlebar Position, Width & Shape	151				