


Seat

Refer to *Important Safety Precautions* on [page 23](#).

Removal


1. Remove the seat mounting bolts (1).
2. Remove the seat (2) by sliding it backward.

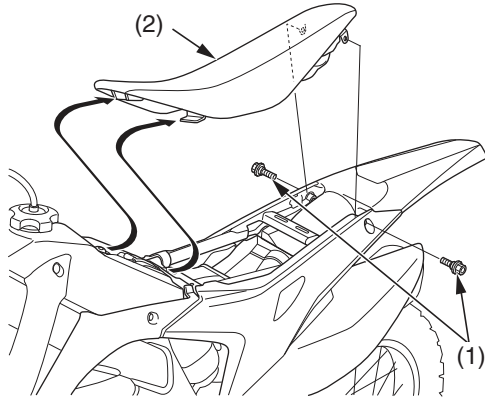

(1) seat mounting bolts (2) seat

Installation

1. Install the seat while aligning the seat front slit (1) with the front seat bracket (2) and seat prong (3) with the seat stopper plate (4).
2. Install and tighten the seat mounting bolts (5) to the specified torque:
19 lbf·ft (26 N·m, 2.7 kgf·m)

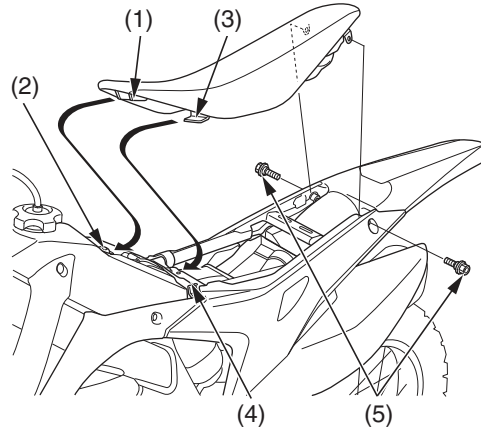

(1) seat front slit (4) seat stopper plate
(2) front seat bracket (5) seat mounting bolts
(3) seat prong