


## Exhaust Pipe Removal


1. Remove the left and right mufflers ([page 108](#)).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and gasket (3).

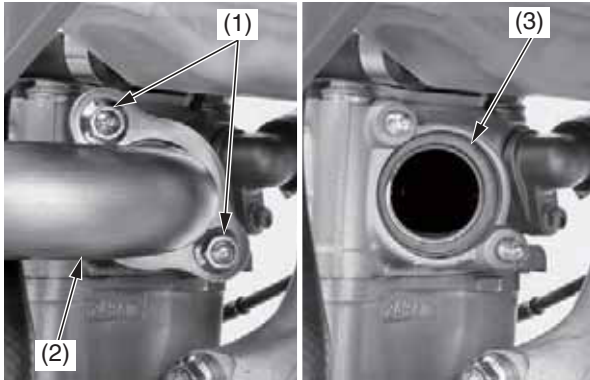

- (1) exhaust pipe joint nuts  
(2) exhaust pipe  
(3) gasket

## Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3) but do not tighten the nuts yet.

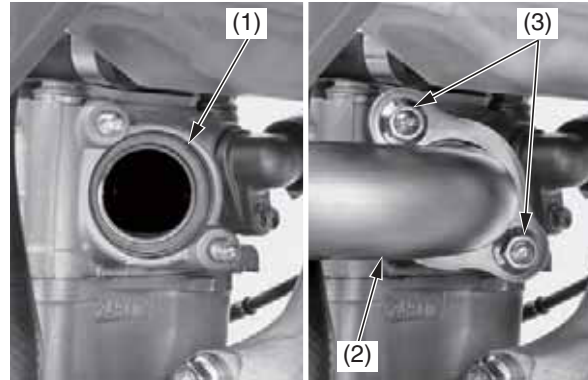

- (1) exhaust pipe gasket (new)  
(2) exhaust pipe  
(3) exhaust pipe joint nuts

3. Install the right muffler ([page 109](#)) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:  
15 lbf·ft (21 N·m, 2.1 kgf·m)
5. Tighten the right muffler clamp bolt, right muffler mounting A bolt and B bolt ([page 109](#)).
6. Install the left muffler ([page 110](#)).