


- Insert the tensioner stopper (8) into the cam chain tensioner lifter (9).  
Turn the tensioner stopper clockwise and lock the cam chain tensioner lifter by pushing the handle (10) to the cam chain tensioner lifter.
- Tensioner stopper 07AMG-001A100

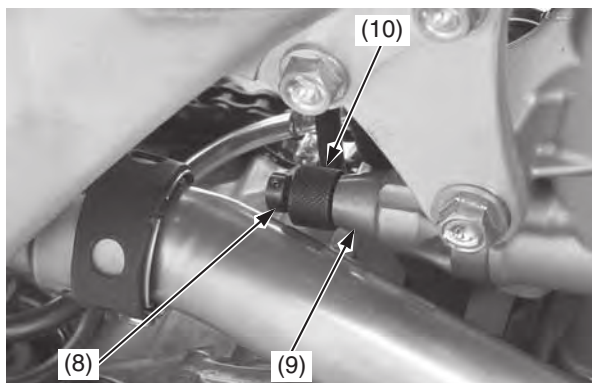


(8) tensioner stopper  
(9) cam chain tensioner lifter  
(10) handle

- Loosen the camshaft holder A bolts (11) and B bolts (12) in a crisscross pattern in two or three steps.  
Remove the camshaft holder A bolts, B bolts, washers (13), rocker arm shaft stopper bolt (14) and camshaft holder (15).

**NOTICE**

*Do not let the camshaft holder bolts washer and rocker arm shaft stopper bolt fall into the crankcase.*

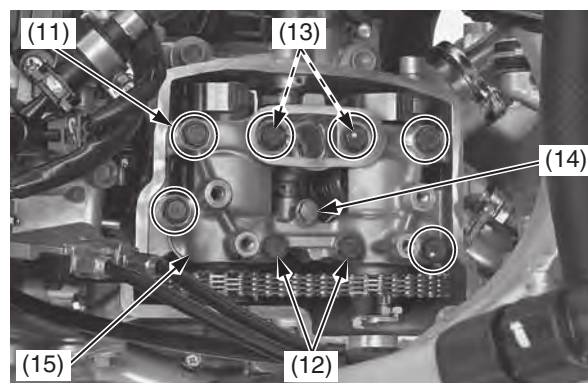


(11) camshaft holder A bolts  
(12) camshaft holder B bolts  
(13) washers  
(14) rocker arm shaft stopper bolt  
(15) camshaft holder

- Remove the cam sprocket bolt (5) of the intake camshaft.

**NOTICE**

*Do not let the cam sprocket bolt fall into the crankcase.*

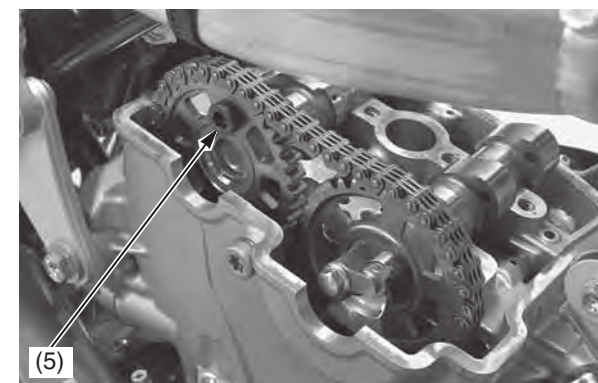


(5) cam sprocket bolt

- Remove the intake camshaft (16) from the intake cam sprocket (17).  
Remove the intake cam sprocket and exhaust camshaft (18) by removing the cam chain (19).

Suspend the cam chain with a piece of wire to prevent the chain from falling into the crankcase.

**NOTICE**

*Do not let the cam chain and intake cam sprocket fall into the crankcase.*

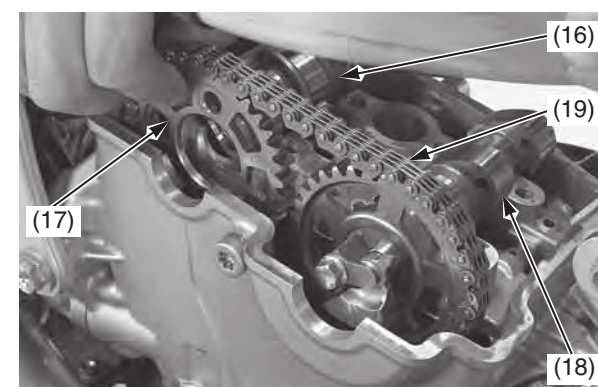

(16) intake camshaft  
(17) intake cam sprocket  
(18) exhaust camshaft  
(19) cam chain

(cont'd)