

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.


Rear ABS (Anti-lock Brake System) OFF indicator **CRF250RLA**

Comes on briefly when the ignition switch is turned to the ON position.
Comes on when the ABS function on the rear wheel is turned off.



N Neutral indicator
Comes on when the transmission is in Neutral.

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position.

If it comes on while engine is running:  **P.89**