

Contents

TIPS	157
Transporting Your Motorcycle	158
Storing Your Honda	159
Preparation for Storage.....	159
Removal from Storage	159
You & the Environment	160
Troubleshooting	161
TAKING CARE OF THE UNEXPECTED	163
Taking Care of the Unexpected	164
General Guidelines	164
If Your Engine Quits or Won't Start	165
If You Have a Flat Tire	167
Should You Repair or Replace a Tire or Tube?	167
Emergency Front Wheel Removal/Installation	167
Emergency Rear Wheel Removal/Installation	169
If the High Coolant Temperature Indicator Lights	170
If You Have a Burned-out Light Bulb	171
Burned-out Light Bulb	171
If a Fuse Blows	172
If You Crash	173
If You Lose Your Key	174
If Your Battery Is Low (or Dead)	175

TECHNICAL INFORMATION.....	177
Vehicle Identification	178
Serial Numbers	178
Specifications	179
Torque Specifications	181
Nuts, Bolts, Fasteners	181
Emission Control Systems	184
Exhaust Emission Requirements	184
Noise Emission Requirements	184
Exhaust Emission Control System.....	184
Evaporative Emission Control System	184
Crankcase Emission Control System.....	184
Fuel Permeation Emission Control System...184	
Noise Emission Control System	185
Problems Affecting Motorcycle Exhaust Emissions	185
Catalytic Converter	186
Oxygenated Fuels	187
Off-Road Logbook	188
Optional Parts List	190
Spare Parts & Equipment	191
Spare Parts	191
General Tools.....	191
Honda Special Tools.....	191
Chemical Products	191
Other Products	191
Wiring Diagram	192

CONSUMER INFORMATION	193
Authorized Manuals	194
Warranty Coverage	195
Warranty Service	196
Contacting Honda	197
Your Honda Dealer	198
Reporting Safety Defects (USA only)	199
INDEX	200
Quick Reference	207
How To Avoid Costly Repairs	207
Quick Reference	208