

# Indicators & Displays

## Speedometer

The speedometer shows riding speed in miles or kilometers per hour.

## Odometer/Tripmeter A & B


The odometer shows the total miles or kilometers ridden.

The odometer can be displayed from 0 to 999,999 miles (kilometers).

The tripmeter A and tripmeter B show number of miles or kilometers ridden since you last reset the tripmeter.

To select the odometer, tripmeter A or tripmeter B, push the SEL button (1).

The tripmeter return to 0 when the read-out exceeds 9,999.9 miles (kilometers).

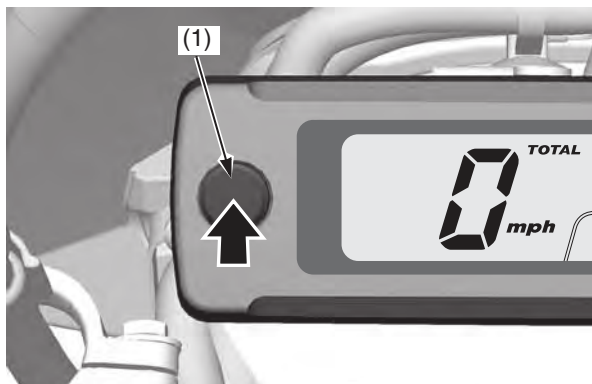

(1) SEL button


## To Reset the Tripmeter, Average Fuel Mileage and Fuel Consumption

Press the SEL button (1) to select the TRIP A (2), average fuel mileage A (3), fuel consumption A (4), TRIP B, average fuel mileage B or fuel consumption B.

To reset tripmeter, average fuel mileage, and fuel consumption, press and hold SEL button with tripmeter, average fuel mileage, or fuel consumption displayed.

When they are reset, reset display appears at each indication. Then, the display returns to the last selected indication.

For example TRIP A, Average Fuel Mileage A and Fuel Consumption A:

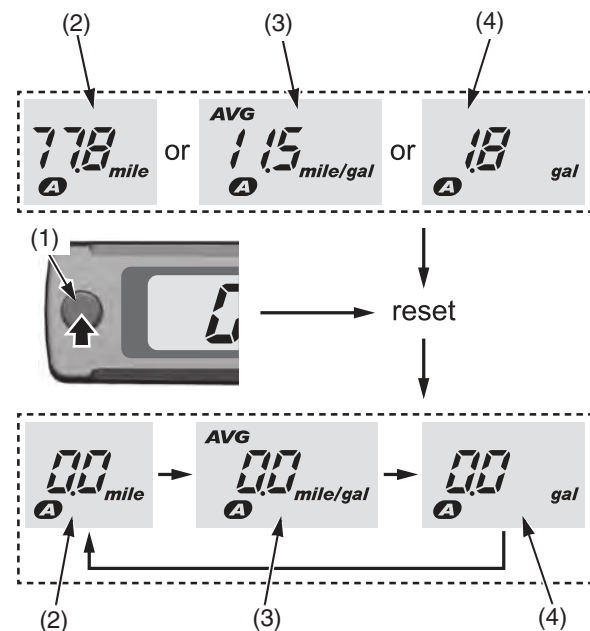

(1) SEL button  
(2) TRIP A

(3) fuel mileage A  
(4) fuel consumption A

## Fuel Mileage Meter

The fuel mileage meter includes the following functions:

- current fuel mileage
- average fuel mileage
- fuel consumption

The unit of the indication depends on the unit which you select (page 14). If the speed and mileage unit is set to “km/h”/“km,” the indication mode of the current and average fuel mileage can be selected km/L or L/100 km (page 14). If the speed and mileage unit is set to “mph”/“mile”, the fuel mileage unit shows “mile/gal”.

Press the SEL button to change the indication to the current fuel mileage, average fuel mileage A, average fuel mileage B, fuel consumption A or fuel consumption B.

### Current Fuel Mileage

Current fuel mileage shows the current, or instant fuel mileage you are getting. When your motorcycle speed is 4 mph (6 km/h) or below, “---.-(---)” is displayed. When “---.-(---)” is displayed except for the above mentioned cases, go to your dealer for service.

### Average Fuel Mileage

The average fuel mileage is based on the each tripmeter A and tripmeter B. The average fuel mileage since tripmeter was reset. When “---.-(---)” is displayed, see your dealer for service. Average fuel mileage is also reset when the tripmeter is reset (see previous step).

### Fuel Consumption

The fuel consumption is based on the each tripmeter A and tripmeter B. The fuel consumption since tripmeter was reset. When “---.” is displayed, see your dealer for service.