


# Coolant

## Cooling System Bleed Air

1. Remove the radiator cap (1).
2. Fill the system with the recommended coolant through the filler opening up to filler neck (2). Use a fresh recommended coolant mixture (page 72).


Capacity: 1.31 US qt (1.24 ℓ)  
after disassembly  
1.20 US qt (1.14 ℓ)  
after draining

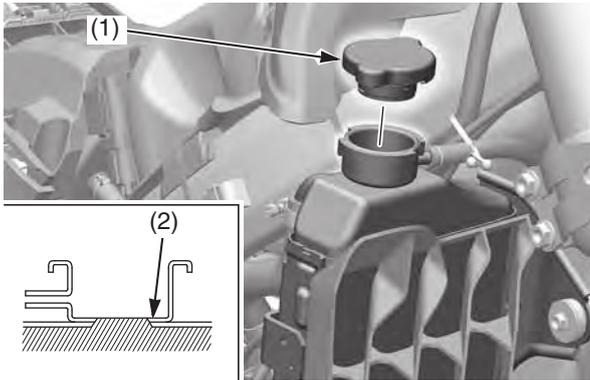

(1) radiator cap

(2) filler neck

3. Remove the reserve tank cap (3) and fill the reserve tank up to the UPPER level line (4).

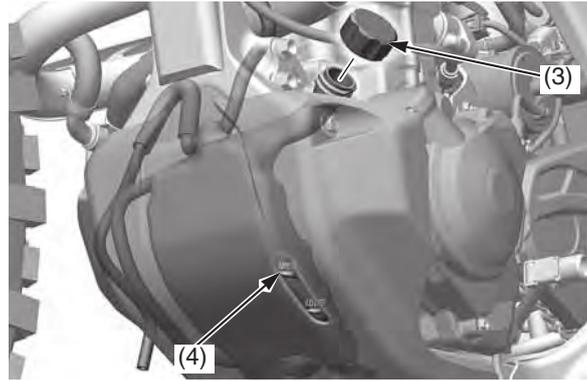

(3) reserve tank cap

(4) UPPER level line

4. Bleed air from the system as follows:
  - Shift the transmission into neutral. Start the engine and let it idle 2 -3 minutes.
  - Snap the throttle three - four times to bleed air from the system.
  - Stop the engine and, if necessary, add coolant up to the proper level. Reinstall the radiator cap.
  - Check the level of coolant in the reserve tank and fill to the UPPER level if it is low.

### NOTICE

*If the radiator cap is not installed properly, it will cause excessive coolant loss and may result in overheating and engine damage.*

5. Install the reserve tank cap.