


Right Side Cover

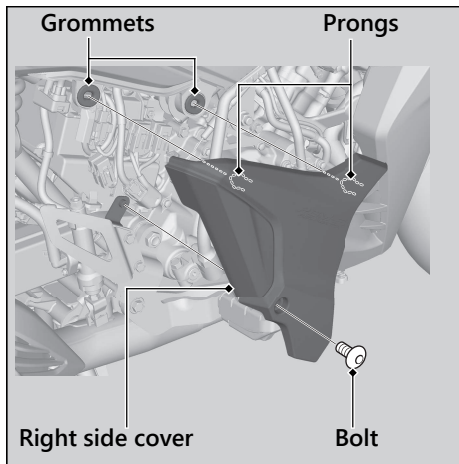

Removal

1. Remove the bolt.
2. Remove the right side cover by releasing the prongs from the grommets.

Installation

Install the parts in the reverse order of removal.