

Checking Spark Plug

For the recommended spark plug, see "Specifications." ➤ P. 107

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range can cause engine damage.

1. Remove the centre lower cowl. ➤ P. 50
2. Remove the right cowl. ➤ P. 51
3. Remove the radiator mounting bolt/collar.
4. Move the radiator to the left side and remove the grommets from the hooks.
5. Pull the radiator forward.

