



## Headlight

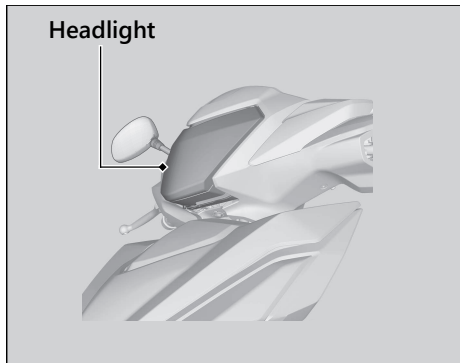

The headlight uses several LEDs.  
If there is a LED which is not turned on, see your dealer for servicing.

## Brakelight/Taillight Bulb

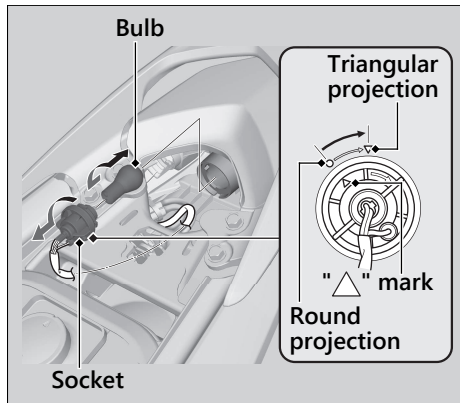

1. Open the seat. ► P. 29
2. Turn the socket counterclockwise and pull it out.
3. Slightly press the bulb in and turn it counterclockwise.