


4. Install a new bulb and parts in the reverse order of removal.
 - Install the socket by aligning its "△" mark with the round projection on the brakelight/taillight housing. Then turn it clockwise until the "△" mark is aligned with the triangular projection.
5. Close the seat.

Front/Rear Turn Signal Bulb

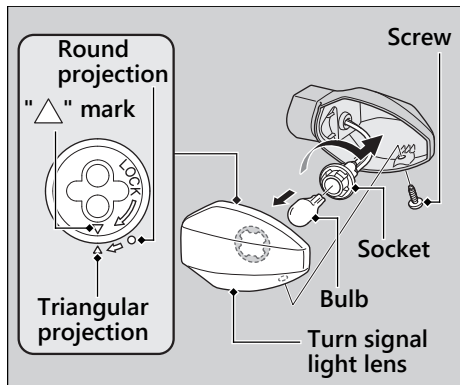

1. Remove the screw and turn signal light lens.
2. Turn the socket counterclockwise and pull it out.
3. Pull the bulb out without turning it.