

Switches *(Continued)*

Ignition Switch

Switches the electrical system on/off, locks the steering.

Key can be removed when in the ○ (Off) or 🔒 (Lock) position.

| (On)
Turns electrical system on for starting/riding.

○ (Off)
Turns engine off.

🔒 (Lock)
Locks steering.

