


The shutter will automatically close when you remove the ignition key at the  (Lock) position.

Also you can close the shutter manually.

### **| Close**

- 1 Remove the ignition key from the ignition switch.
- 2 Align the projection of the shutter key with the slot of the shutter, and turn the shutter key counterclockwise
- 3 Remove the key.

### **| Open**

Align the projection of the shutter key with the slot of the shutter, and turn the shutter key clockwise.