

Battery


Removal

Make sure the ignition switch is in the \bigcirc (Off) position.

1. Remove the right side cover. ➤ P. 53
2. Remove the harness band clip from the battery cover. ➤ P. 52
3. Disconnect the negative \ominus terminal from the battery.
4. Disconnect the positive \oplus terminal from the battery.
5. Remove the bolt.

Positive terminal

Bolt

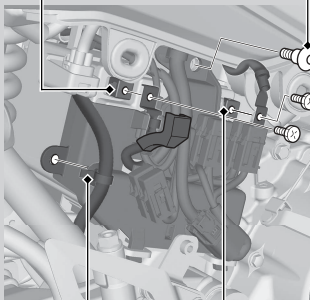

Harness band clip

Negative terminal