

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence.
➔ P. 20
- Check that there is petrol in the fuel tank.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence.
➔ P. 20
- Check for a blown fuse. ➔ P. 84
- Check for a loose battery connection (➔ P. 44) or battery terminal corrosion (➔ P. 34).

- Check the condition of the battery. ➔ P. 79

If the problem continues, have your motorcycle inspected by your dealer.