

Comfort & Convenience Adjustment

Handgrip Heater


(Models equipped with Handgrip Heater)

The handgrip heater warms up the right and left handgrips of the handlebar for comfortable riding on a cold day.

The handgrip heater button is located on the right fairing panel.

To operate, adjust the handgrip heater button with the engine started.

RIGHT FAIRING PANEL

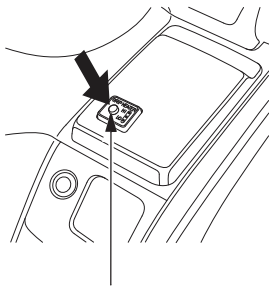


handgrip heater button

Handgrip heater indicator

- : On
- : Off
- ◐ : On (dimmed)

OFF High — Temperature — Low

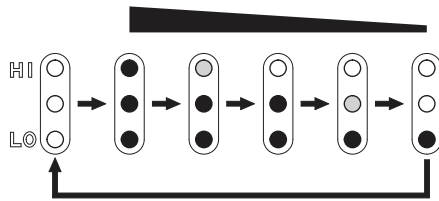

Adjust the temperature by repeatedly pressing the button.

The temperature can be set five levels.

Do not leave the handgrip heater in the high position for a long time on a warm day.

Wear gloves to protect your hands from the heated grips.

Do not use the handgrip heater with the engine at idle for a long time. It may result in a low (or dead) battery.