





## MODE Knob/Button Function

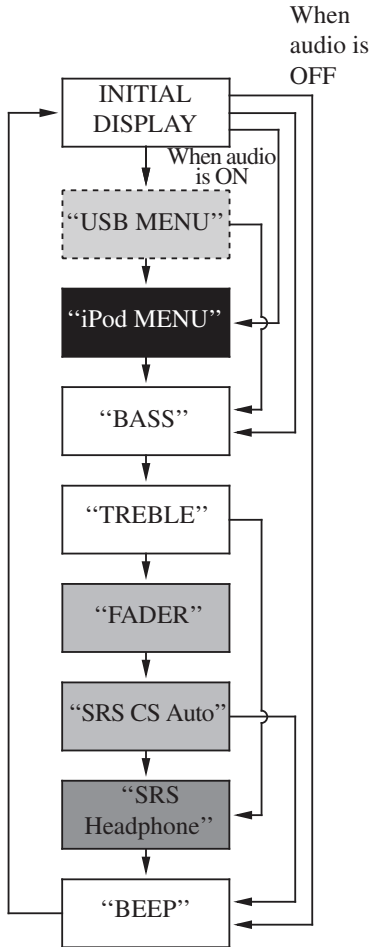


● —————> Push the MODE Knob/Button

●  When the speaker is used

●  When the headset is used

●  When USB flash drive is used

●  When iPod® is used