



### Cruise control set speed & Air temperature gauge display

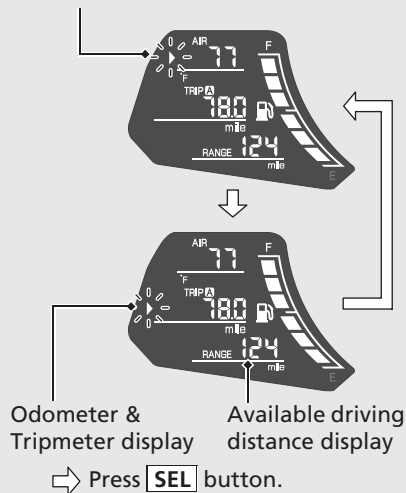

### ▮ Cruise Control Set Speed (🚗) & Air temperature Gauge [AIR] Display

To select cruise control set speed or air temperature gauge, Press **[SET]** button when the cursor is at cruise control set speed and Air temperature gauge display.

#### Cruise control set speed (🚗)

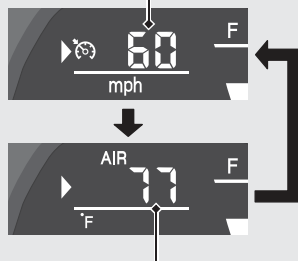

#### Air temperature gauge

➡ Press **[SET]** button.

- 1 Press **[SEL]** button to move the cursor to the cruise control set speed and air temperature gauge display.
- 2 Press **[SET]** button to select the cruise control set speed or air temperature gauge.

### Cruise Control Set Speed (🚗)

The speed set for the cruise control is displayed.

If the cruise control set speed does not memorized, “---” is displayed.

**Cruise Control:** ➡ P. 121

### Air Temperature Gauge [AIR]

Displays ambient temperature.

**Display range:** 14 to 122°F (–10 to 50°C)

- Below 13°F (–11°C): “---” is displayed
- Above 122°F (50°C): 122°F or 50°C flashes

The temperature readout may be incorrect at low speeds due to reflected heat.