



INFO 2 Display

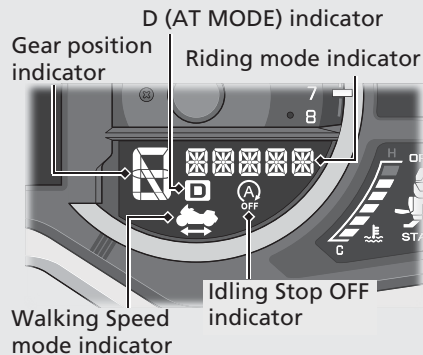

INFO 2 display contains the following:

- Gear position indicator (P.39)
- Riding mode indicator (P.40)
- **GL1800BD/D/DA**
D (AT MODE) indicator (D) (P.40)
- **GL1800D/DA Canada model only**
Idling Stop OFF indicator (OFF) (P.40)
- **GL1800BD/D/DA**
Walking Speed mode indicator (P.40)

Gear Position Indicator

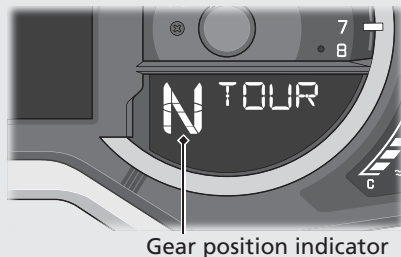

The gear position is shown in the gear position indicator as follows:

GL1800BD/D/DA

Indication	Gear position
I	1st gear
II	2nd gear
III	3rd gear
IV	4th gear
V	5th gear
VI	6th gear
VII	7th gear
N	Neutral
R	Reverse
F	Forward
!	Shifting failure

- ▶ " -- " flashes when the engine stop switch position is changed from (Run) to (Stop) position with the ignition switch in ON.
- ▶ " -- " flashes when the ignition switch is turned ON with the engine stop switch in the (Stop) position.

The indicator may flash if:

- ▶ The front wheel leaves the ground.
 - ▶ You turn the wheel while the motorcycle is upright on the stand.
- This is normal. To operate the system again, turn the ignition switch to OFF, and then to ON again.

If " -- " is blinking in the gear position indicator while riding: (P.181)